

November 11, 2024

## Diplomat-Z-Series and customized PRO-Z-Bases

1. Choose the best place on your vehicle where you would like the flagpole to be mounted.




2. Check if there are existing screw holes in your car that you could use. If not, you may need to drill new holes to attach the Z-Bracket.



Here are some mounting examples




3. Measure the angle and length of the bevel required for the Z-Base.






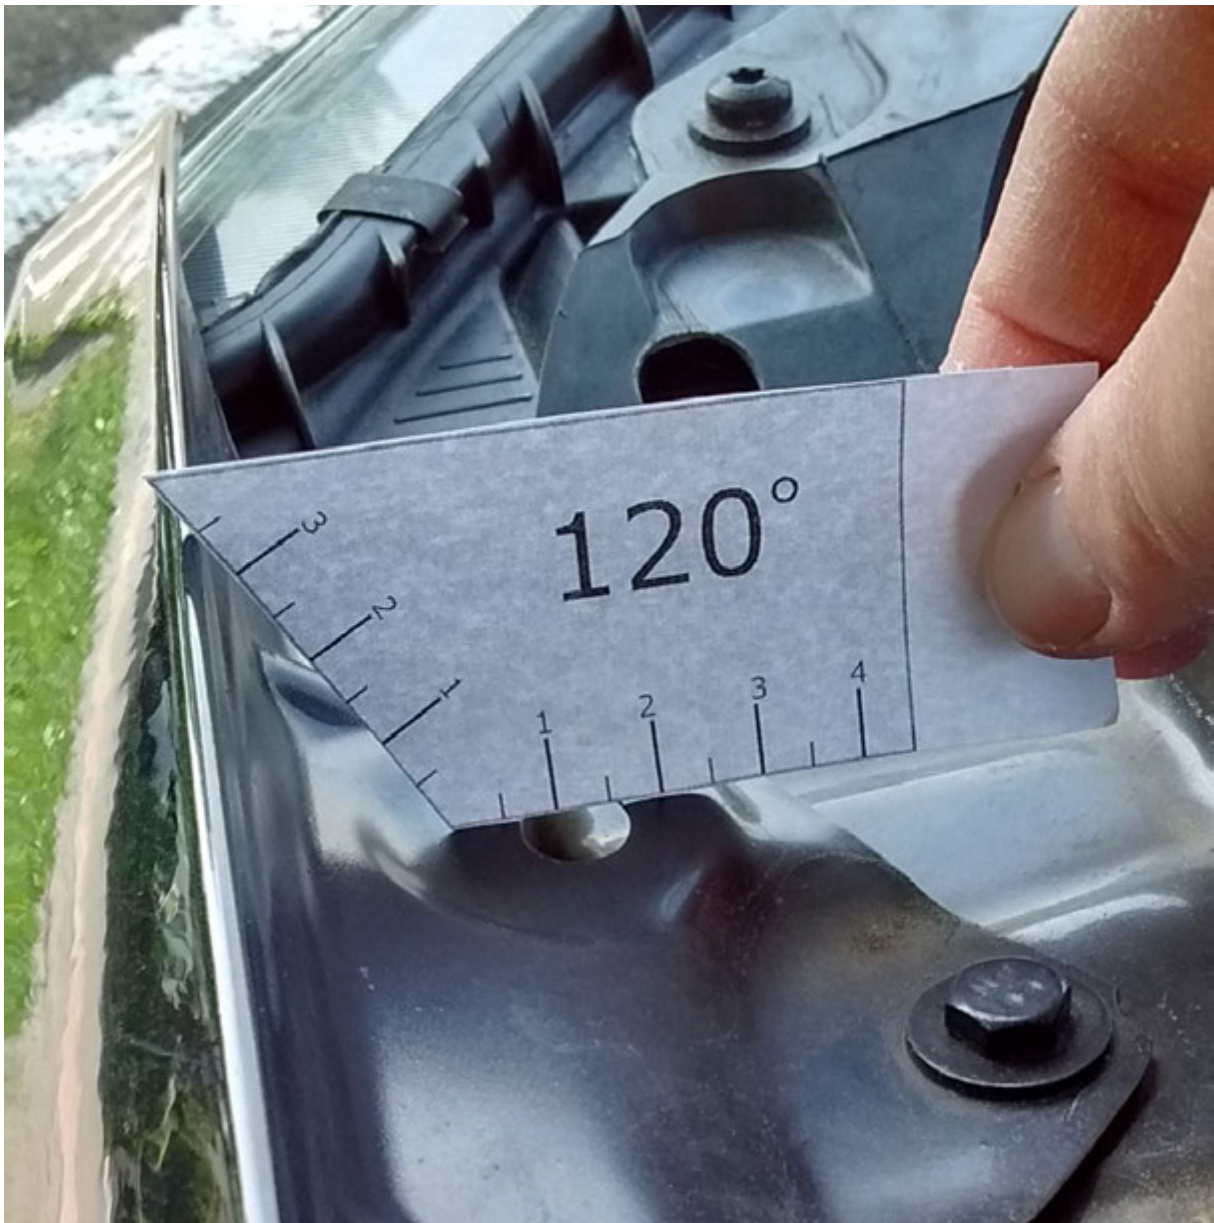


Example: An angle of  $120^\circ$  works best, with a bevel length of at least 4 cm, ideally 5 cm, to allow enough space for the screw.

4. Verify that the selected Z-Base fits correctly.

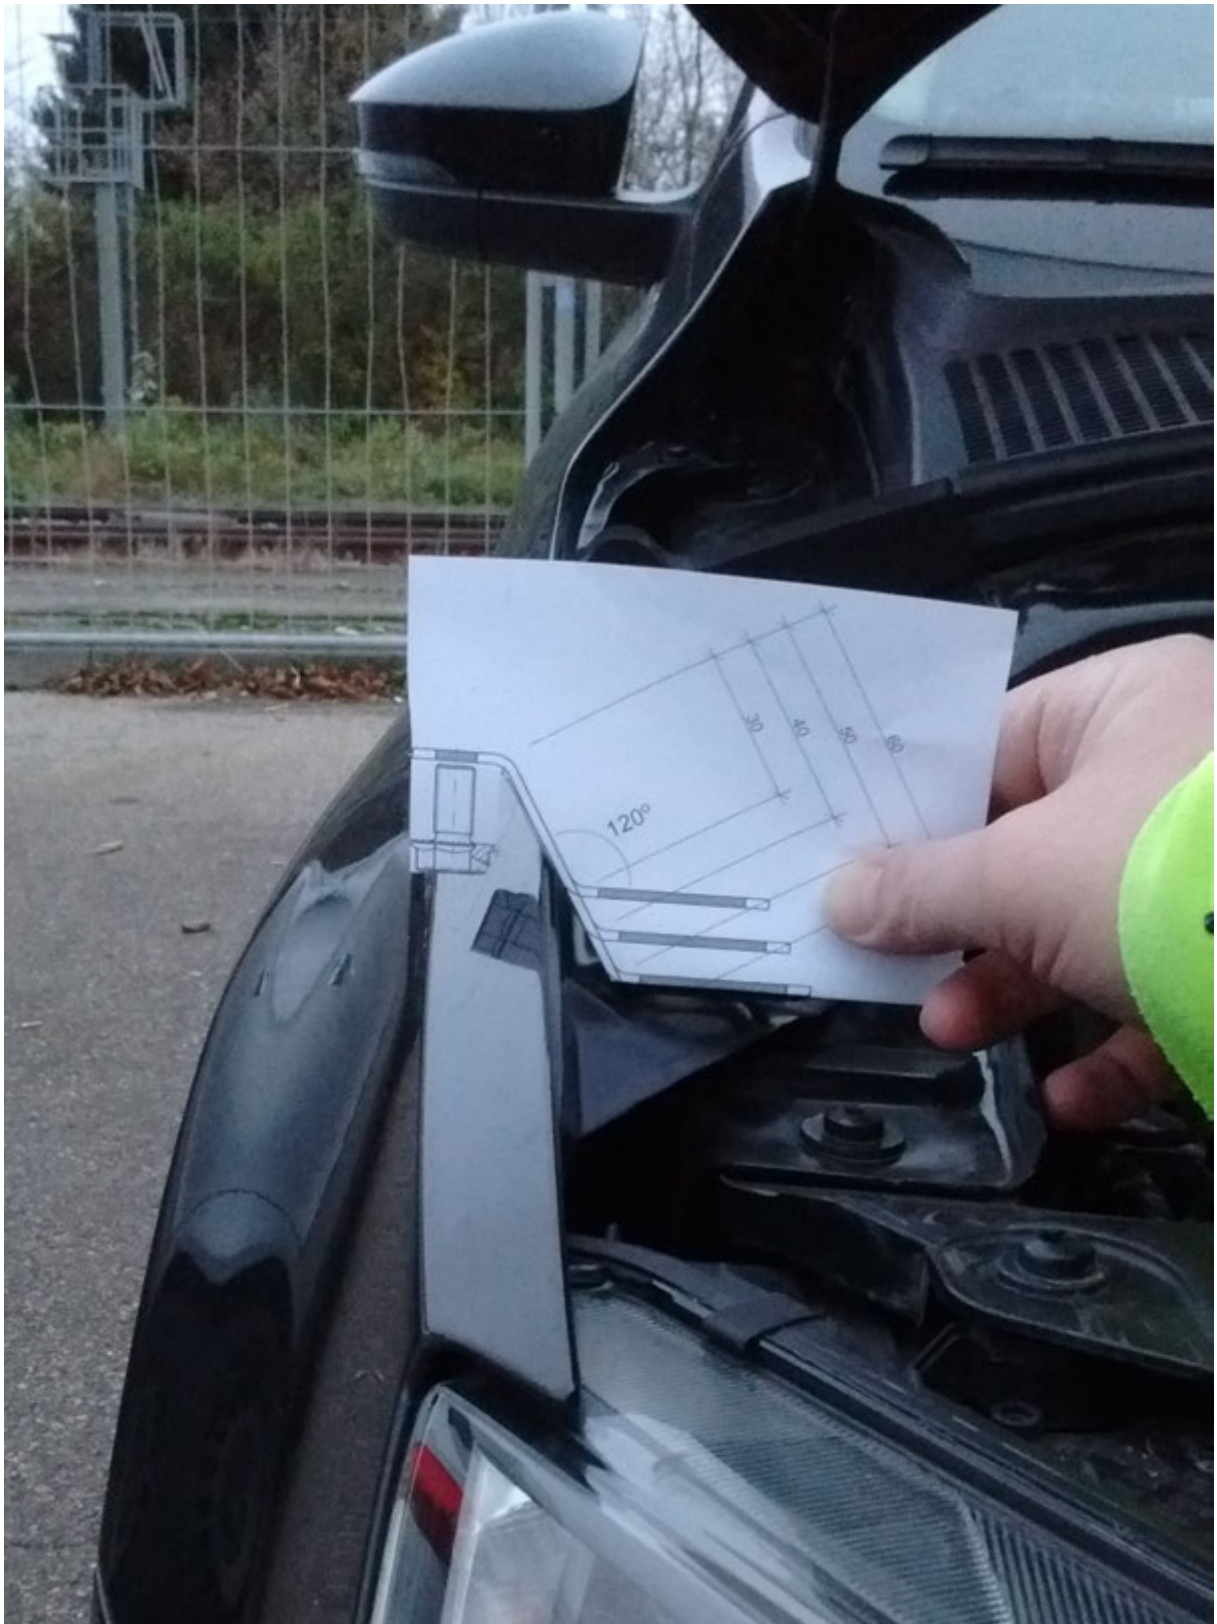

If you encounter any difficulties, please send us photos like this via email.

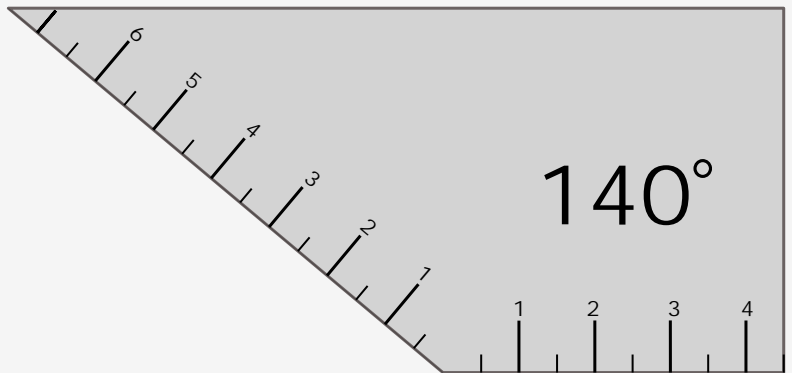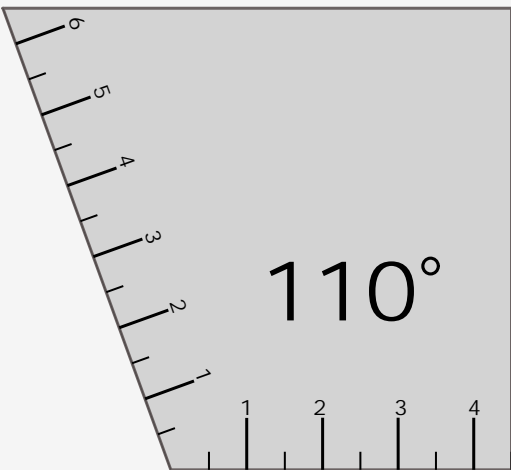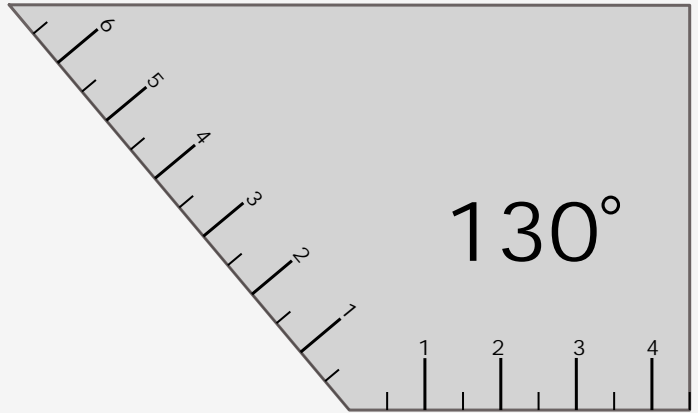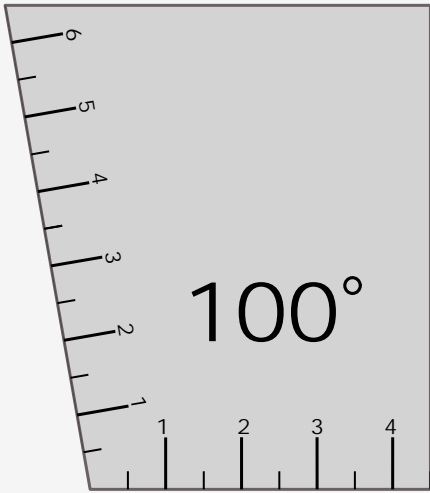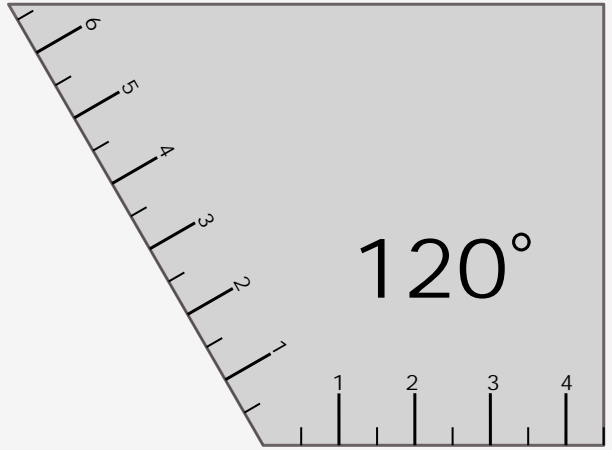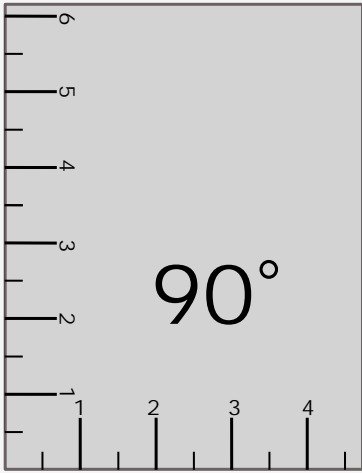

1cm

1in

